

KPZ 51E-9-1

Stainless Steel housing, IP 67




IP 67,
Tare up to 100 %
Automatic Zero
Net-/ Gross-/Tare-weighing
Simple counting
Zero setting ,
Alarm / check control setting,
back light LCD-Indicator,

OIML trade approved Class



Diameters :

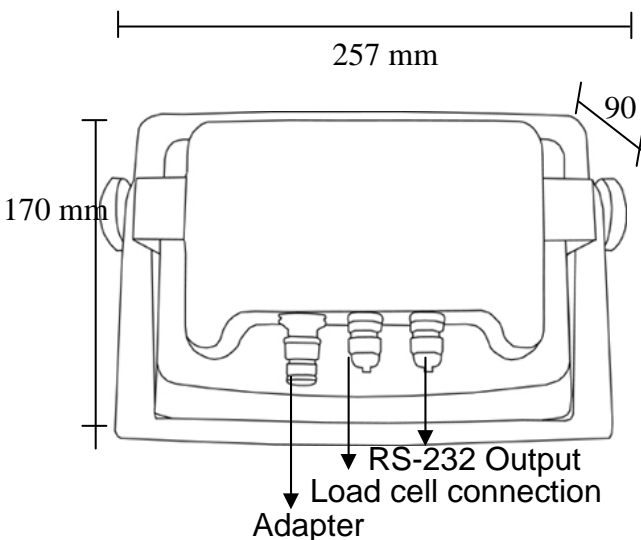

(for IP 67, for RS232 and load cells use only cable diameter from 3 to 5,5 mm)

Technical data: Indicator: **KPZ 51E-9-1** robust, stainless steel housing **IP 67**, user-friendly, large function keys. LCD display: 6 digit, various symbols, backlight, high of digits 25 mm. Operating temperature from -10°C up to $+40^{\circ}\text{C}$, operation 230 Volt through external power supply, inbuilt battery (possibility of battery operation).

Functions: automatic and manual zero setting, switch Net/Gross weight, 100% tare, multiple tare, unit switching, simple piece counting by reference no. 10, 20, 50, 100 i 200. Possibility to enter data and bring out data through serial interface (optional): computer functional control , possibility of choosing different exit formats, edition activation : via computer, continuously or after zero come back. Minus indication, LCD backlight, automatic shut off after 0-9 minutes, pre-set value control or limit value control LOW – OK - HIGH (any two weight values to choose, tone or light signal), electronic stabilization filter and signal distortion, automatic self test, error messages.

Indication: zero setting, gross, net, stability, LOW-Bat indication, pre-set/limit value, too small piece quantity or too small weight.

LED: charging status.

Options: serial interface RS 232, battery, label printer

Key functions:

| Button | Description |
|----------------------------|---|
| ON →0← | switch the indicator ON Switch the indicating to 0.00 |
| OFF | switch the indicator OFF |
| ↔T | This key is used to tare and zero settings, when an existing weight is on the scale. If a TARE weight is stored, the Tare Signal will indicate over Net . As soon as you remove the TARE weight re-set to ZERO by the user of the scale, the display shows the weight with a minus symbol in front on the LCD display. The maximum weighing range is reduced for the tare value. |
| NET GROSS | Switch over between Net / Gross Tare, repeatedly |
| UNITS | Switch over weighing units |